



SW-1070



Hybrid Control Panel

Safe & Secure

SW-1070 User Manual

www.hkc.ie



Security

Installer _____
Address _____

Tel: _____ Fax: _____
After Hours: _____
Date: _____

Note: *Please refer to RKP inner flap label for more details of Quick Codes, Inhibits and Audio Memo-Pad operation.*

WARNING

While this system has been designed to the highest standards it does not offer guaranteed protection against burglary or fire. Any alarm system is subject to compromise or failure to activate for a variety of reasons. Therefore, good installation practices and regular maintenance are essential to ensure continuous satisfactory operation of the system. The transmission of text messages is dependent on the SMS service provider. HKC Ltd. cannot guarantee successful messaging. Messages which remain undelivered when the validity period expires are discarded. The validity period is the time the message is submitted plus 12 hours.

COPYRIGHT

© HKC Ltd. All Rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated in another language in any form or by any means - electronic, mechanical or otherwise without the prior written permission of HKC Ltd.

DISCLAIMER


HKC Ltd. makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further, HKC Ltd. reserve the right to revise this publication and to make changes from time to time in the contents hereof without obligation of HKC Ltd. to notify any person of such revision.

CE This marking certifies that this product has been tested in a representative system complying with the requirements laid down in Electromagnetic Compatibility directive 89/336/EEC and Low Voltage Directive 72/23/EEC and subsequent modifications.

FULL SET With Exit Timer

Press  followed by User Code
OR if allowed...

Press   next  User Code*

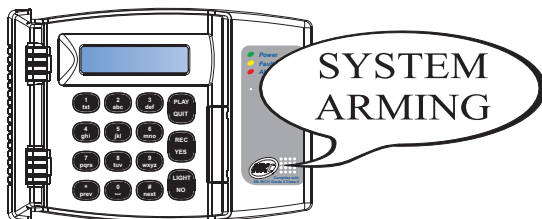


Buzzer sounds for length of exit time
Keypad displays exit time remaining



FULL SET Without Exit Timer

Press   next  User Code*

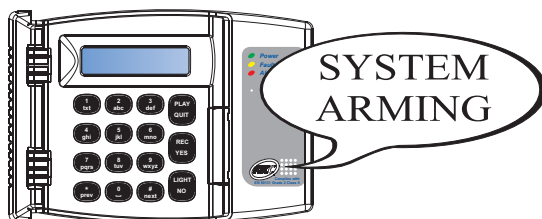

Keypad displays....


System Arming

* *Quick Code with User Code is EN 50131 requirement*

SYSTEM UNSET

To unset the system or cancel an alarm

Press  followed by User Code

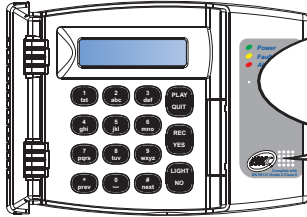

SYSTEM
UNSET

Zone & Point Details

Z1	_____	Z36	_____	P50	_____
Z2	_____	Z37	_____	P51	_____
Z3	_____	Z38	_____	P52	_____
Z4	_____	Z39	_____	P53	_____
Z5	_____	Z40	_____	P54	_____
Z6	_____	Z41	_____	P55	_____
Z7	_____	Z42	_____	P56	_____
Z8	_____	Z43	_____	P57	_____
Z9	_____	Z44	_____	P58	_____
Z10	_____	Z45	_____	P59	_____
Z11	_____	Z46	_____	P60	_____
Z12	_____	Z47	_____	P61	_____
Z13	_____	Z48	_____	P62	_____
Z14	_____	Z49	_____	P63	_____
Z15	_____	Z50	_____	P64	_____
Z16	_____	Z51	_____	P65	_____
Z17	_____	Z52	_____	P66	_____
Z18	_____	Z53	_____	P67	_____
Z19	_____	Z54	_____	P68	_____
Z20	_____	Z54	_____	P69	_____
Z21	_____	Z56	_____	P70	_____
Z22	_____	Z57	_____	P71	_____
Z23	_____	Z58	_____	P72	_____
Z24	_____	Z59	_____	P73	_____
Z25	_____	Z60	_____	P74	_____
Z26	_____	Z61	_____	P75	_____
Z27	_____	Z62	_____	P76	_____
Z28	_____	Z63	_____	P77	_____
Z29	_____	Z64	_____	P78	_____
Z30	_____	Z65	_____	P79	_____
Z31	_____	Z66	_____	P80	_____
Z32	_____	Z67	_____	P81	_____
Z33	_____	Z68	_____	P82	_____
Z34	_____	Z69	_____	P83	_____
Z35	_____	Z70	_____	P84	_____
				P85	_____
				P86	_____
				P87	_____
				P88	_____
				P89	_____

PART SET A

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*



Keypad displays.... 


PART SET B

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*

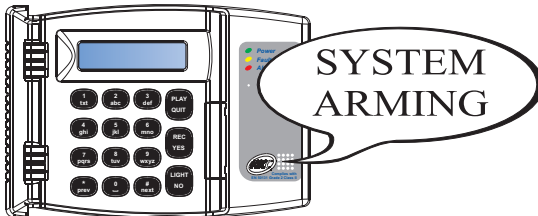

Keypad displays.... 

NOTES: Zones inhibited in Part Set will remain inactive for the duration of system set.

* *Quick Code with User Code is EN 50131 requirement*

ZONE INHIBIT



CAUTION

Zones inhibited will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example 1: To Inhibit Zone 5

Press User Code

Keypad displays... ...

System will now set with Zone 5 inhibited

It is possible to inhibit a number of zones as shown below.

Example 2: To inhibit zones 5 & 3

Press User Code

NOTE: System will set in normal manner

FORCED ARMING



CAUTION

Zones inhibited by forced arming will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example: Zones 3, 4, 5 & 7 are open

...

Press User Code


System will now set with Zones 3,4,5 and 7 automatically inhibited for the duration of the system set.

RF-KEYFOB

If your system has an RF-Keyfob please note the following.

RF-Keyfob in Quick Key mode

Green:- Transmission OK, Red: Transmission not OK, Orange:- Out of range

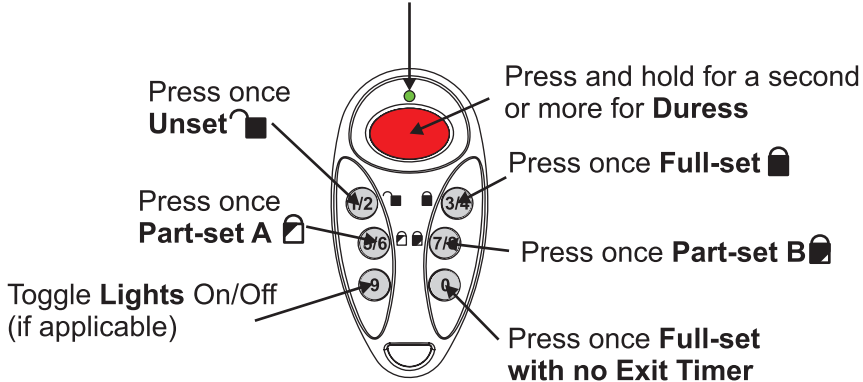

Normally the RF-Keyfob works in “Quick Key” mode. However, you may ask your installer to set it up for “Secure Unset” mode.

In “Secure Unset” mode, to unset the system or to cancel an alarm press **0** followed by User Code.

Also in “Secure Unset” mode;

Press **1** for **Full Set**

Press **2** for **Part-set A**

Press **3** for **Part-set B**

Press **9** to toggles **Lights** On/Off (if applicable)

Note: Always make sure you get a green “transmission OK” light otherwise you will have to repeat your key-press.



Thank you for considering HKC products
for your security system.

For further information in relation to any of our
products, please contact us at:

HKC Ltd.

Parkway Business Centre, Ballymount,
Dublin 24, Ireland.

T: 353 1 456 8353

F: 353 1 456 8332

E: sales@hkc.ie

or visit us at www.hkc.ie